



USER INSTRUCTIONS
CERAMIC SPACE HEATER WITH REMOTE CONTROL
ROOM HEATER
MODEL No. QE-7018

Thank You very much for your custom

You have purchased one of the most modern and reliable electrical appliances currently available, which we know will give you long and reliable service.

As with all electrical appliances, it is important that all safeguards are followed. We therefore ask you to read through these instructions carefully and to keep them in a safe place for future reference.

This manual can be downloaded from the Quantum eco-elec website at

www.quantum-ecoelec.com/support

THE CONTENTS OF THE BOX

Along with these instructions the box should also contain the following items

The most important item is a QE-7018 wall heater

1 off Remote control

2 off No8 Woodscrews, 35 mm long

2 off plastic Rawlplugs for fixing the heater to a concrete or brick wall

If there is anything missing please call 05602-045420 between 8:00am and 4:00pm Mon to Fri and we will do our best to replace the items as soon as possible, or you can email us at:-

support@quantum-ecoelec.com

CONFORMITY

This product is CE, TÜV & RoHS marked and conforms to these standards.




Environmental Protection

European directive 2002/96/EC on waste electrical and electronic equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted household waste.

Please recycle where facilities exist. Check with your local Authority on recycling advice and disposal sites in your area.

INSTALLATION INSTRUCTIONS

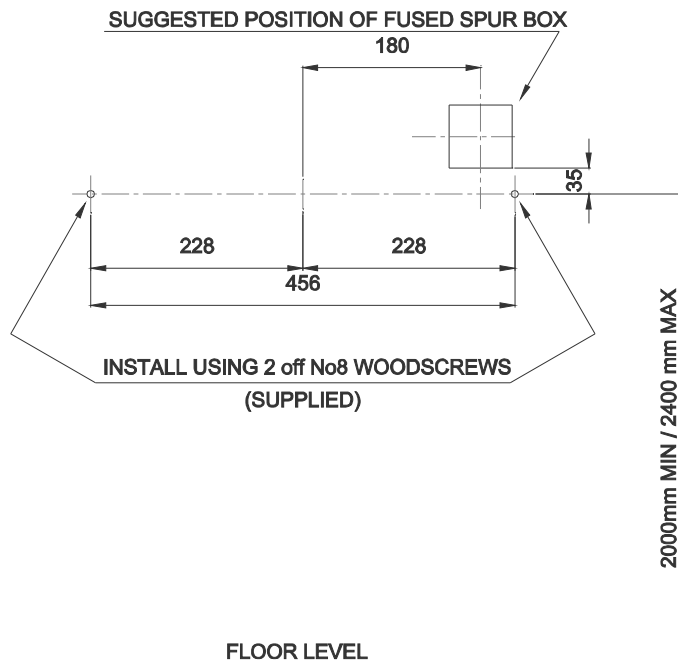

ALL ELECTRICAL WORK SHOULD BE CARRIED OUT BY A COMPETENT ELECTRICIAN

- 1 Decide on a suitable location.
- 2 Mark the position for the 2 No.8 Woodscrews. (supplied)
- 3 Fit the screws leaving the screws protruding 15mm from the wall.
- 4 Mark the position on the wall for the 13A Fused Spur connection.
- 5 Install the fused spur back box and supply cable. (Surface mount or sunken)
- 6 Mount the heater on to the 2 off No.8 Woodscrews.
- 7 Ensure that the mains supply is turned off.
- 8 Connect the supply to the fused spur front plate.
- 9 Connect the unit to the front plate as described below.
- 10 Replace the front plate.
- 11 Installation is now complete.

CONNECTION DETAILS

THIS UNIT MUST BE CONNECTED TO THE MAINS SUPPLY BY A SWITCHED FUSED SPUR
FITTED WITH A 10A FUSE

The wires in the cable attached to this unit are coloured in accordance with the following code:-

| | | |
|-------|-------|---------|
| BLUE | ===== | NEUTRAL |
| BROWN | ===== | LIVE |

This unit does not require an earth wire as the case is Double Insulated.

As the colour may not correspond with the markings indentifying the terminals in the fused spur proceed as follows.

- Blue wire must be connected to the terminal marked 'N LOAD'
- Brown wire must be connected to the terminal marked 'L LOAD'

OPERATION

There may be a trace of smoke or odour during the first few minutes of initial use or when the unit has not been used for a period of time. This is quite normal and will quickly disappear.

FROM THE FRONT PANEL

The unit is in standby mode (POWER light will be ON) while the FUSED SPUR is switched on.

To switch on the appliance press the LEFT HAND button on the front panels. The heater will select FAN mode.

By pressing this button again will select 1000W low heat setting.

Pressing it again selects the 2000W high heat setting.

Pressing it again will turn the unit back to STANDBY MODE.

The timer can be set from ½ hour to 7 ½ hours by pressing the TIMER (RIGHT HAND) button. This steps the time up by ½ hour with each press.

To turn off the unit switch off the FUSED SPUR.

FROM THE REMOTE CONTROL

The remote control requires two AAA batteries. (not supplied)

To switch the appliance on from the STANDBY mode press the RED button on the remote control. The unit will switch on in the FAN only mode.

Pressing the 1000W button will select the low heat setting.

Pressing the 2000W button will select the high heat setting.

The timer can be set from ½ hour to 7 ½ hours by pressing the TIMER button which steps up ½ hour with each press.

To turn off the unit press the RED button.

ATTENTION. When the unit is switched off the unit will continue to blow cool air for 60 seconds before shutting down.

A thermal overload protector is built into the unit to prevent overheating. If the unit overheats it will shut down automatically.

CARE AND CLEANING

- The unit should be cleaned regularly.
- Isolate from the mains supply and allow the unit to cool. Wipe over with a damp cloth.
- Do not use detergents or abrasives.
- Do not scrape the surfaces with sharp hand tools.
- Use a vacuum cleaner to remove dust and fluff from the vents.

SAFETY WARNINGS

- This product is not a toy. It should not be used by children or infirm persons without supervision.
- The appliance must be fastened to a wall with the air outlet to the bottom. **DO NOT** mount the unit any other way.
- Isolate from the mains supply when not in use or when cleaning the unit.
- **DO NOT** operate the appliance with a damaged cord. If the supply cord is damaged it must be replaced to avoid any hazard.
- Parts of the heater casing may get hot when in use. **Do not** let bare skin touch any hot surface to avoid burns.
- **Do not** allow the unit to get wet.
- **Do not** use the heater in dusty environments or where flammable vapours are present.
- **Do not** place the heater near any other source of heat.
- **Do not** cover the heater. A fire may occur if the heater comes into contact with any flammable material (Curtains, Drapes, Bedding etc...) when in use.
- **Do not** use in the immediate vicinity of bathtubs, showers, wash basins or swimming pools.
- **Do not** use outdoors.
- **Do not** use this appliance for other than its intended purpose. This appliance is for interior use only.
- **Do not** attempt to repair, disassemble or modify the appliance in any way. There are no user-serviceable parts inside.
- **Do not** insert or allow to be inserted any foreign objects into the inlet or output openings as this may cause an electric shock, fire or damage to the unit.
- **Do not** use this heater with an external programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered.
- **Only use the autotimer while the unit is supervised.**

GUARANTEE & WARRANTY

This product is covered with a 12 month manufacturers warranty from the date of purchase against faulty workmanship and components.

Should you need to return the unit please call QUANTUM ECO-ELEC on 05602-045420 for a Returns Authority Number (RAN) and our full postal address for repairs.

TECHNICAL SPECIFICATION

| | |
|----------------------|--------------------|
| Supply Voltage | 220 - 240V |
| Power rating | 10A MAX |
| Frequency | 50Hz |
| Output Power | 1000 or 2000 Watts |
| Timer Control | 0.5 - 7.5 Hours |
| Remote Control Range | 7 metres MAX |
| Remote power source | 2 x AAA Batteries |

QE©

QE-7018 ISS.2